

# High Intensity Heater Instruction Sheet

## DR 30 Series Heater Mounting

### Models Affected

DR30, DR30(S)




The heater can be suspended with chains or rigid threaded rod. Local codes, or conditions that would cause the unit to move (e.g., wind drafts, blowers, crane rails, etc.), may require rigid threaded rod. Consult all applicable codes before installation.

### Installation Notes:

- DR 30 model heaters can be mounted in either position as shown in figures 1 and 2.
- The ignitor (spark electrode or pilot burner) must be located in the down position.
- The heater must be mounted level on a  $20^{\circ}$  -  $35^{\circ}$  angle from horizontal as shown in figure 3.

Figure 1 • DR 30 Mounting - Front View

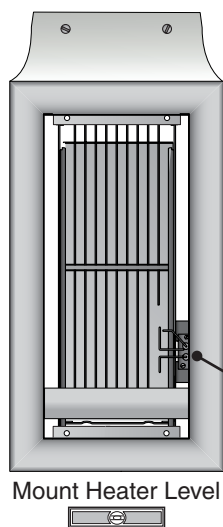

When mounting the heater in this position, the ignitor must be located in the **lower-right** corner.

Figure 3 • DR 30 Mounting - Side View


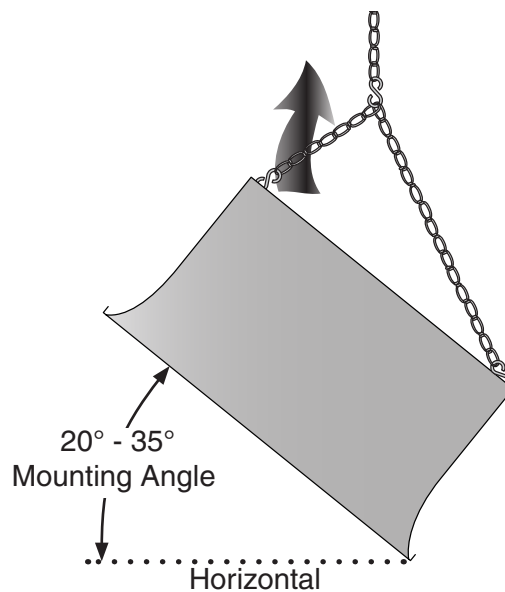


Figure 2 • DR 30(S) Mounting - Front View

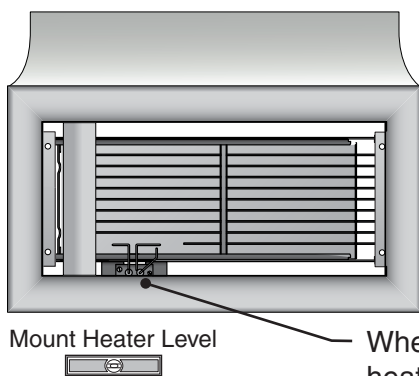

When mounting the heater in this position, the ignitor must be located in the **lower-left** corner.