

**SINGLE PHASE ELECTRIC HEATED MODELS ONLY**

## **GUARDIAN GB, GR AND GS COMMERCIAL AIR CURTAIN RANGE**



### **INSTALLATION MANUAL**



BS EN ISO 12100:2010 Safety of machinery.

BS EN 60204-1:2018 Safety of machinery. Electrical equipment of machines.

BS EN 55014-1:2017 Electromagnetic compatibility.

BS EN 60335-2-30:2009+A11:2012 Safety. Requirements for room heaters to the following European CE directives- 2006/95/EC - low voltage; 2014/30/EU - electromagnetic compatibility

Please read this document carefully before commencing installation, commissioning and/or servicing.  
Leave it with the end user/site agent to be placed in their premises technical file after installation.

#### **WARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.

All work must be carried out by appropriately qualified persons.

The manufacturer does not take any responsibility in the event of non-observance of the regulations concerning the connection of the apparatus causing a dangerous operation possibly resulting in damage to the apparatus and/or environment in which the unit is installed.



# Contents

---

## General Information (G)

---

Guardian air curtain range .....	4
General product information.....	4
Health and safety .....	4
Requirements .....	5
Clearance distances .....	5
Electrical .....	5
Important notice to installers .....	5
Using this manual .....	5

## Technical Data (TD)

---

Technical data .....	6
Fuses .....	6
Dimensions. GS Surface mounted models ...	7
Clearance distances .....	7
Dimensions. GR Recessed models.....	8
Clearance distances .....	8
Dimensions. GB Bulkhead mounted models	9
Clearance distances .....	9
Program panel dimensions.....	10
Component layout .....	10

## Installation (I)

---

Installation .....	12
Mounting .....	12
Electrical supply. ....	12
Installation process .....	13
Suspending on drop rods .....	14
Wall mounting bracket .....	14
Program panel .....	16
Optional wiring.....	16
Networking.....	16
Wiring diagram.....	17
Air curtain addressing .....	18
Power-up manual reset .....	18

## Control panel operation (C)

---

Keypad buttons .....	18
Operation .....	18
Standard settings .....	19
Engineers settings.....	19
Door link settings.....	19
Link-group interlock.....	19
All controllers.....	20
Quick operations.....	20

## Maintenance and servicing (MS)

---

Maintenance and servicing.....	21
Inlet foam filter replacement GS.....	21
Inlet foam filter replacement GR .....	22
Honeycomb outlet replacement .....	22

## Fault Finding (FF)

---

Fault finding. ....	23
General.....	23
Program panel. ....	23
Fault codes .....	24

## Spare Parts (SP)

---

Spare parts. ....	25
General.....	25

## Parts Replacement (PR)

---

Parts replacement. ....	25
Control panel .....	25
Heating element .....	26
Fan deck.....	26

# G

## Guardian air curtain range

### General product information

#### Models

- GS Surface mounted model
- GR Recessed mounted model
- GB Bulkhead mounted model

#### Three sizes

- 1000mm
- 1500mm
- 2000mm

All electrically heated

The new design allows for quick and easy access to the control panel and the installers terminal block, the GS range has two access panels on the 1000, three on the 1500 and four on the 2000. The GR has hinged access panels which can be removed with ease

These models require a single phase (230v) electrical supply.

All units have fans capable of providing standard & high capacity air duties.

Units are designed for versatile installation, options of wall mounted, recessed within a false ceiling, fitted in a bulkhead, or on drop rods in front of glass fronted entrances.

A wall mounting bracket is available as an optional extra. Units can be mounted adjacent to each other to cover the full door opening across wider entrances.

All models are supplied with a program panel and 10m length of RJ45 communication cable. A 100m cable is available at an additional cost. The program panel allows the user to control either a single air curtain, or a network of up to 16 air curtains.

Easy programming the end users simply select whether they require the heat on or off, the

required fan setting (1,2 or 3 speed), and the outlet temperature setting

Options for BMS compatible via Modbus communication can be linked to optional external thermostat for proportional control in various set temperatures

### Health and safety

Before installing, carefully read the instructions and follow the processes explained by the manufacturer

Check that the temperature ranges given and those of the location match. The appliance must be powered with a voltage corresponding to the value shown on the rating plate.

Ensure that anchoring points are suitable for the weight and loading of the product and if required, add suitable reinforcement to the anchoring points area.

Installing, programming, commissioning, and maintenance of these products must only be carried out by suitably qualified and trained technicians and in full compliance of all applicable regulations and current best practices.

Due consideration should be taken for workplace safety, risk assessments and waste disposal.

Any modification of the product may be hazardous and the manufacturer is not liable for any damage or injury caused by improper use

# Requirements

## Clearance distances

For installation and maintenance clearances, please see the information on page 8 for the GS models, page 6 for the GR models and page 10 for the GB models.

## Electrical

For full electrical loadings, please refer to the technical data section on page 6 of this manual.

It is recommended that the electrical supply to the base unit in the air curtain is via an appropriate switched isolator, fitted in accordance with the regulations in force in the country of use and must be via a fused isolator having a contact separation of greater than 3mm in all poles.



**For safety reasons a good earth connection must ALWAYS be made to the heater and control box.**

Models have a supply requirement of 230V 1 phase, neutral and earth. Maximum cable inlet size is 10mm<sup>2</sup>.

Program panel is wired to the control base unit via a RJ45 pre-wired cable.

Networked air curtain interconnects via a RJ45 pre-wired cable

## Important notice to installers



**Before installation, check the local distribution conditions, supply voltage are compatible.**



**Installation, assembly, commissioning, service and maintenance procedures must be carried out only by suitable competent qualified persons. Unauthorised modifications to the appliance, or departure from the manufacturer's guidance on intended use, or installation contrary to the manufacturer's recommendations may constitute a hazard.**

### Note

To ignore the warning and caution notices, and to ignore the advice from the manufacturer on installation, commissioning, servicing, or use, will jeopardise any applicable warranty, such a situation could also compromise the safe and efficient running of the appliance itself, and thereby constitute a hazard.

## Using this manual

Contained within the text of the manual, the symbols for 'Caution' and 'Warning' these are used to highlight certain points.



**Caution is used when failure to follow or implement the instruction(s) can lead to premature failure or damage to the heater or its component parts.**



**Warning is used when failure to heed or implement the instruction(s) can lead to not only component damage, but also to a hazardous situation being created where there is a risk of personal injury.**

## Technical data

TD

Data	Fan speed	Unit	1000E-1PH	1500E-1PH	2000E-1PH
All models					
Maximum door width	L, M, H	m	1.0	1.5	2.0
Maximum mounting height standard capacity	L, M	m	3.0		
Maximum mounting height high capacity	H	m	4.0		
Maximum air volume	L	m <sup>3</sup> /h	1150	1730	2300
	M	m <sup>3</sup> /h	1440	2270	2880
	H	m <sup>3</sup> /h	1800	2700	3600
Maximum velocity at 0 metre	L	m/s	6.4		
	M	m/s	8	8.4	8
	H	m/s	10	10.1	10
Maximum velocity at 1 metre	H	m/s	5.6	5.2	5.4
Maximum velocity at 2 metre	H	m/s	3.8	3.5	3.7
Maximum velocity at 3 metre	H	m/s	2.8	2.5	2.8
Motor power	L, M, H	W	365	530	730
Noise level @ 3m free field	L	dB(A)	52		
	M	dB(A)	55		
	H	dB(A)	59		
Program panel control wiring			RJ45 (pre-wired cable required)		
Low voltage cable terminal size			1.5mm <sup>2</sup> MAX		
Electric Heat					
Electrical supply	L, M, H		230V 1 phase 50Hz		
Heating capacity	L, H	kW	6	6	8
Total electrical load (Maximum)		A	28.9	28.9	37.6
Max temperature rise	L	°C	14	9	9
	M	°C	11	7	7
	H	°C	9	6	6
Weight		kg	34.5	52	64.5
External fuse size (D type MCB)	H	A	32	32	40

**Table 1 Technical data**

### Fuse

Guardian air curtain control is fitted with a T1H (1A) 5mm x 20mm control circuit fuse.

## Dimensions. GS Surface mounted models

TD

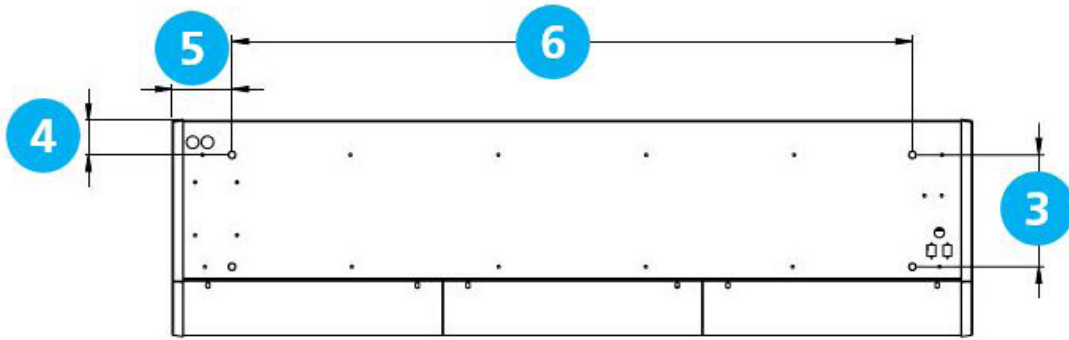


Figure 2 GS Top view

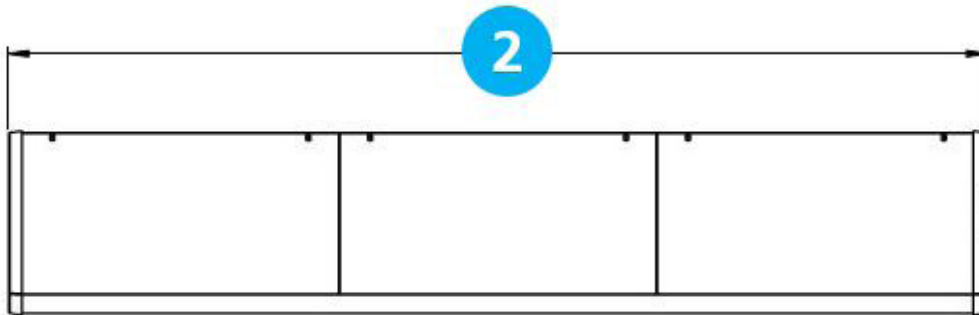


Figure 2.1 GS Front view



Figure 2.2 GS Bottom view

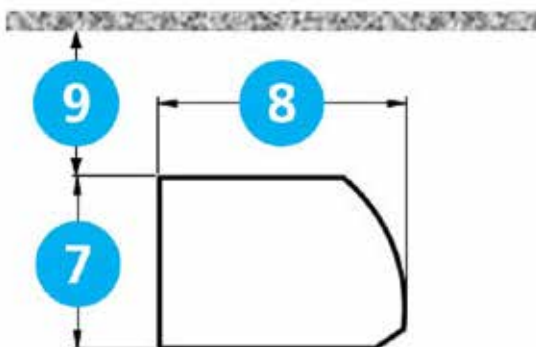


Figure 2.3 GS Side view

Reference	GS 1000	GS 1500	GS 2000
1		440	
2	1094	1620	2148
3		227	
4		70	
5	132	130	132
6	830	1360	1884
7		306	
8		440	
9		>100	

Table 2 GS dimensions

### Clearance distances

It is recommended that a minimum clearance of 100mm is allowed around the top and front of the unit. The clearance allows for cable entry and prevents combustible surfaces overheating.

The minimum mounting height (floor to grille outlet) is 1.8m. The recommended maximum mounting height is 3m for standard fan setting & 4m for high

# Dimensions. GR Recessed models

TD

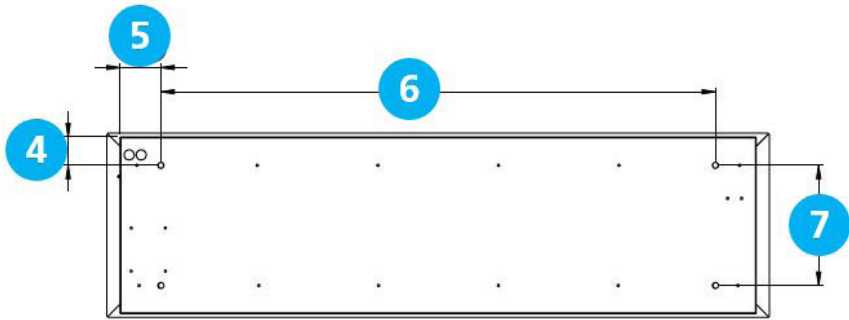


Figure 3 GR Top view

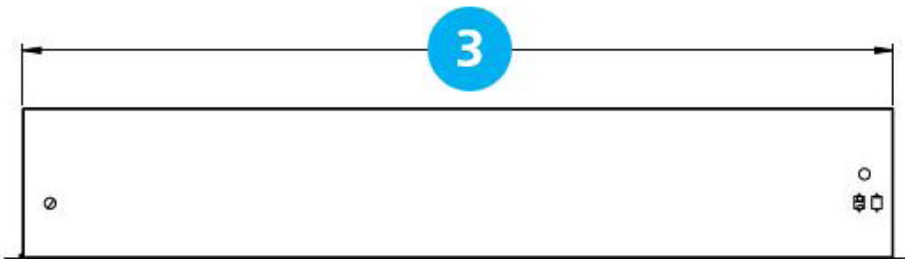


Figure 3.1 GR Front view

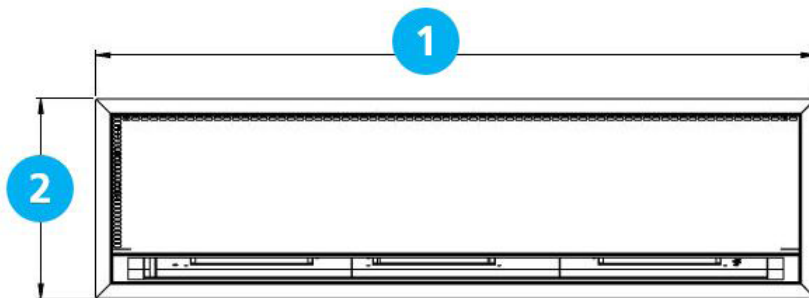


Figure 3.2 GR Bottom view

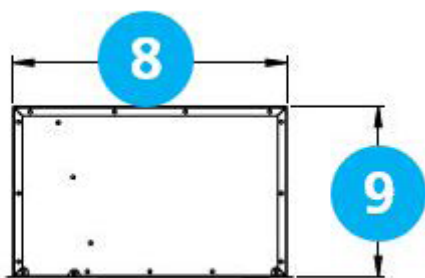


Figure 3.3 GR Side view  
Clearance distances

Reference	GR 1000	GR 1500	GR 2000
1	1125	1650	2177
2	457		
3	1060	1584	2111
4	70		
5	114	112	114
6	830	1360	1884
7	298		
8	438		
9	273		

Table 3 GR dimensions

It is recommended that a minimum clearance of 100mm is allowed around the case. The clearance allows for cable entry and prevents combustible surfaces overheating.

The minimum mounting height (floor to grille outlet) is 1.8m. The recommended maximum mounting height is 3m for standard fan setting & 4m for high.

# Dimensions. GB Bulkhead mounted models

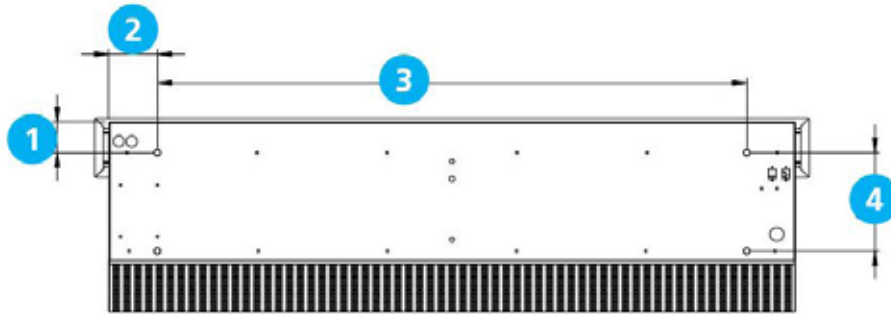


Figure 4 GB Top view

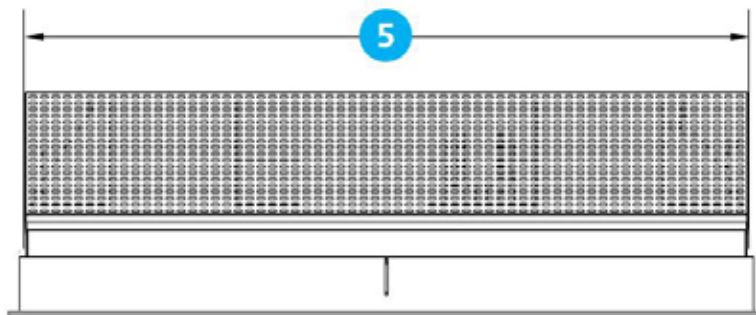


Figure 4.1 GB Front view

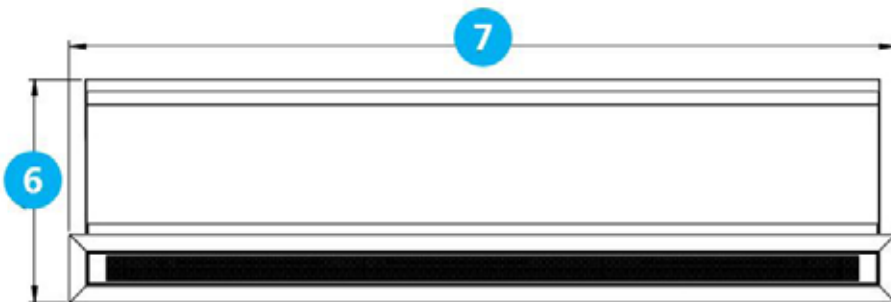


Figure 4.2 GB Bottom view

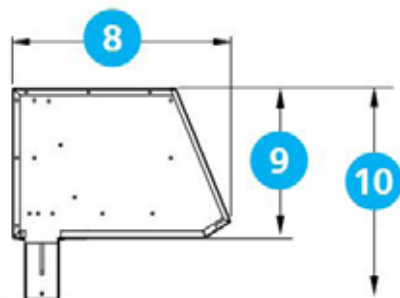


Figure 4.3 GB Side view  
Clearance distances

Reference	GB 1000	GB 1500	GB 2000
1		70	
2	114	112	114
3	830	1360	1884
4		226	
5	1060	1584	2111
6		448	
7	1125	1650	2177
8		436	
9		300	
10		427-487	

Table 4 GB Dimensions

It is recommended that a minimum clearance of 100mm is allowed around the case. The clearance allows for cable entry and prevents combustible surfaces overheating.

The minimum mounting height (floor to grille outlet) is 1.8m. The recommended maximum mounting height is 3m for standard fan setting & 4m for high.

## Program panel dimensions

The program panel is supplied with an industry standard plastic double surface mounted socket box. Alternatively, the program panel can be flush mounted using a customer supplied metal flush conduit box as shown in Figure 5.2

TD



Figure 5 Surface mount box

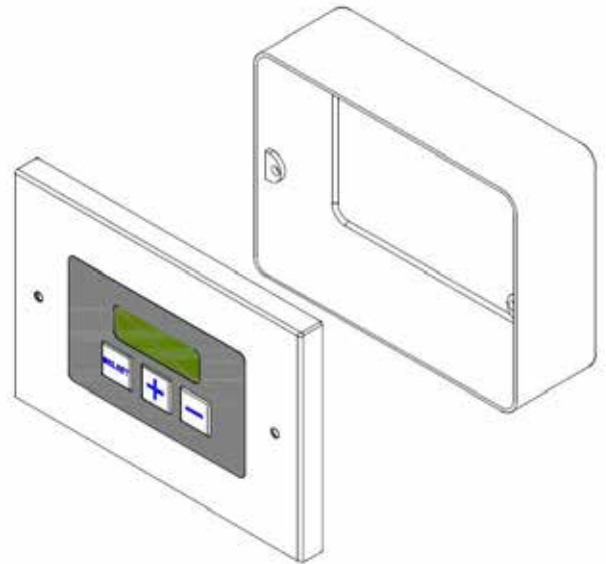


Figure 5.1 Optional flush mounting using metal conduit box

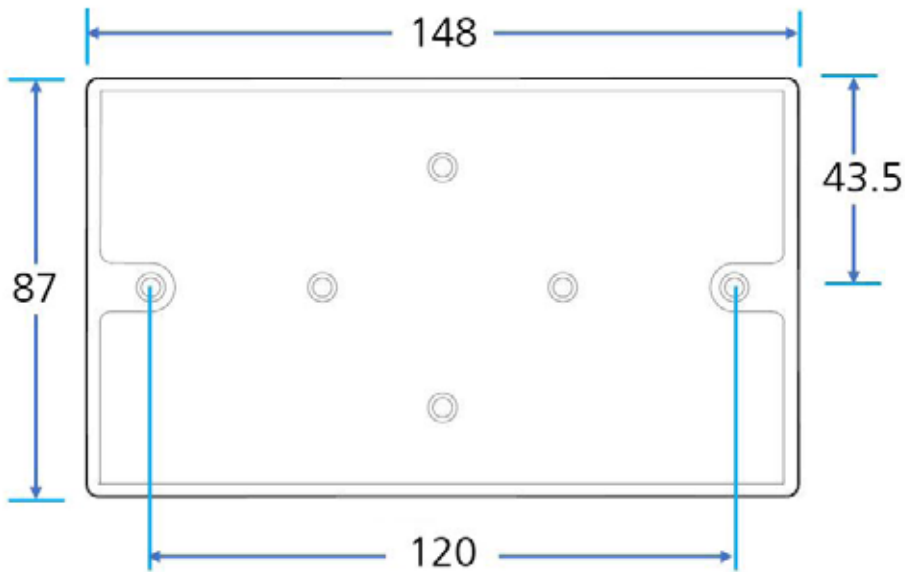


Figure 5.2 Surface mounting back box dimensions

# Component layout

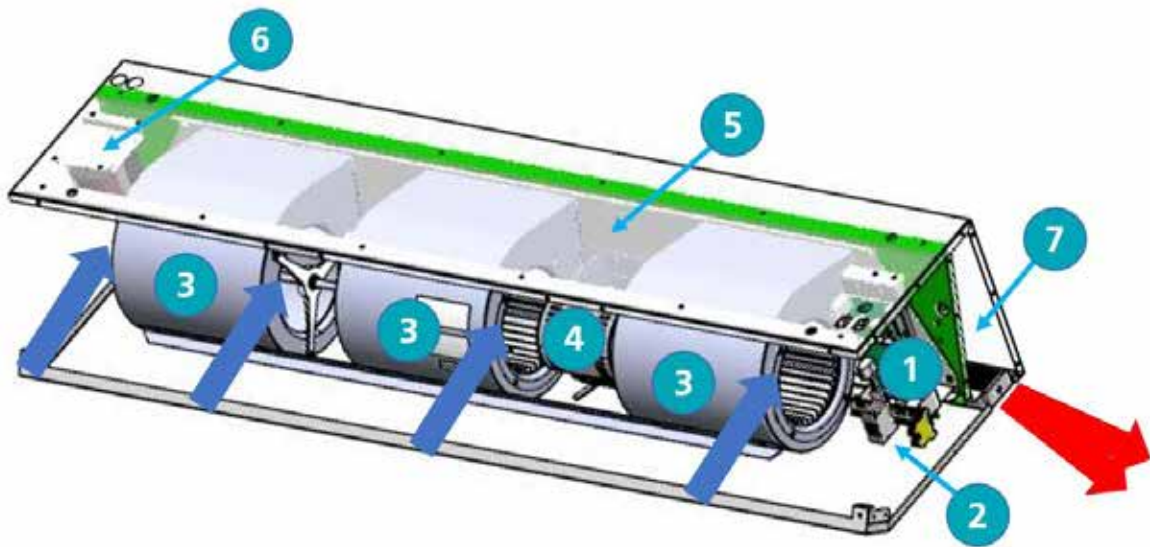


Figure 6 Component layout GS

Location	Component
1	Control panel
2	Installer terminal block
3	Fan
4	Fan motor
5	Fan deck
6	Resistor (1500 only)
7	Heating element

Table 5 GS & GR components

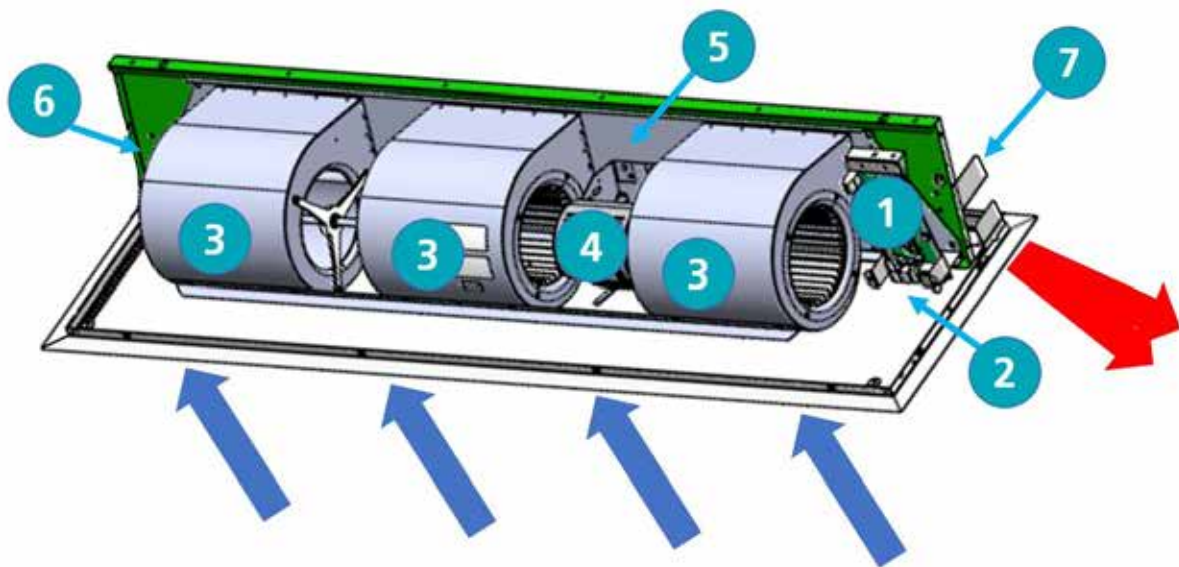


Figure 7 Component layout GR

# Installation

## Mounting

Guardian GS,GR and GB air curtain units are designed to be installed horizontally directly over the door opening on the inside of the building, against a wall or ceiling.



**Care must be taken to allow complete free air movement into the inlet grilles of the unit to ensure the correct working operation of the air curtain. The honeycomb outlet should be as close to the top of the door as possible and can be angled towards the door from 0° to -5°. Ensure to cover the entire door width. See figure 8**

Units can be mounted adjacent to each other to cover the full door opening across wider entrances.




**The GS units are designed for surface mounting and should not be placed into a ceiling void, due to possible obstruction of airflow and difficulty in routine cleaning and maintenance. Use the GR for these types of applications**



**It is the sole responsibility of the installer to ensure that the points of attachment to the building are sound.**



**Verification with the consultant/ architect or owner of the building is recommended to ensure that a sound, stable installation can be achieved.**

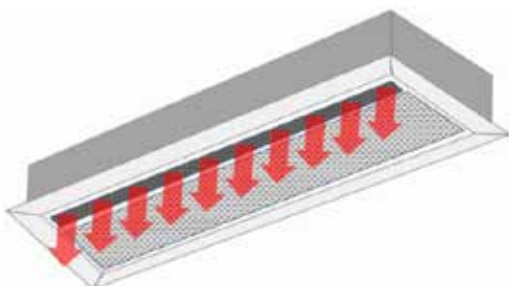

**Figure 8 Honeycomb outlet position near to the door adjustable angle of 0 to -5°**

## Electrical supply.

Units require a connection to 1 phase 230V power supply only.

Models consume either 6kW (1.0 & 1.5m) or 8kW (2.0m), depending on the model.

The appliance shall be connected to the supply via an appropriate a switched fused isolator, having a contact separation of greater than 3mm. See technical data for fuse rating on page 6

Once the covers have been removed, the installation engineers terminal block is located to the right hand side of the unit. This terminal block is used for the connection of the mains supply and additional controls, for example door switch. Wire in accordance to the diagram in the wiring section, on page 17



**For safety reasons, a sound earth connection must always be made to the unit before it is put in to use. The unit should be wired in accordance with IEE Regulations for the Electrical Equipment of Buildings.**




**The program panel is connected to the control panel (base unit) via a pre-wired RJ45 cable maximum length of 100m. 10m supplied as standard. It is recommended that this cable is run separately within its own trunking to avoid external interference.**

## Installation process


1. Remove all packaging and covers

**Note** All outer metal surfaces are covered by a protective plastic film, which must be removed before final fixing and operation of the unit.


2. GS units, Loosen (DO NOT REMOVE) the screws in the top of each front inlet cover [1] (see figure 9.1 and 10 dog bone slot) then slide the left cover to the left [2] which will allow the cover to slide under the end cap. This will allow the next cover to be pushed to the left [3] (see figure 9.1) allowing it to be released from the screw slot [4] by pulling forward and lifted upwards out of the lower groove in the case.
3. The first cover can then be pushed to the right to release it from the screw slot, (see figure 10) then pull forward and lift upwards to be removed. For additional covers fitted on the 1500 or 2000 units loosen the fixing screws and remove as with the previous covers.

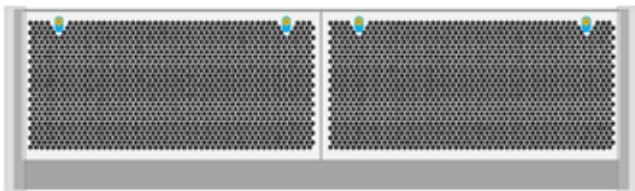


**Figure 9 GS cover fixing point**

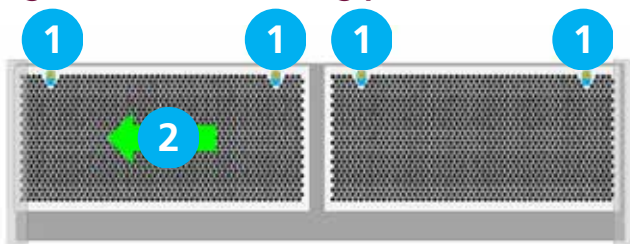

**Figure 9.1 GS cover fixing point**

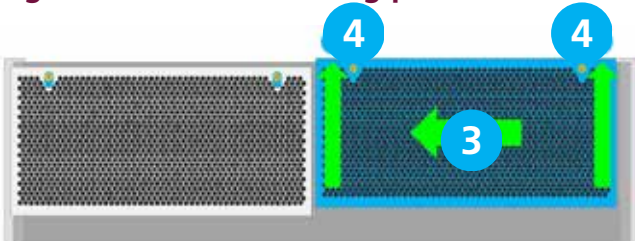


**Figure 9.2 GS cover fixing point**

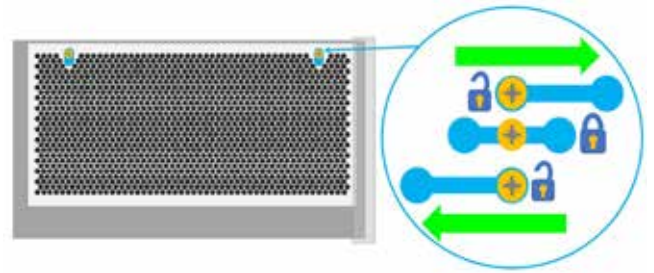

**Figure 10 Dog bone screw fixing slot**

4. On the GS units the lower cover can be removed by removing the two screws at the top of this cover and then pulled out of the tabs from the main case

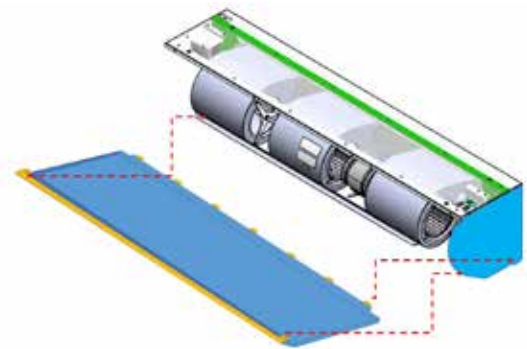


**Figure 11 GS lower access panel**

1. The GR has two captive screws in each panel, loosen these and hinge the panel down.
2. The panel can be removed completely by releasing the bolt hinges on either side of the panel (see figure 13).




**Figure 12 GR cover fixing point**

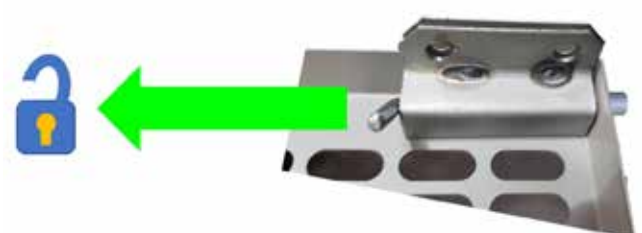

**Figure 13 GR bolt hinge**

## Suspending on drop rods

1. The product is installed using 4 x M10 drop rods fitted into the fixing points in the top of casing.
2. The drop rods must completely pass through the fixing points in the case without being too long to cause damage to products inside the case.
3. Ensure that the secure mounting point in the ceiling is capable of supporting the weight of the unit.
4. Lift the unit (using lifting equipment) onto drop rods ceiling fixing point.

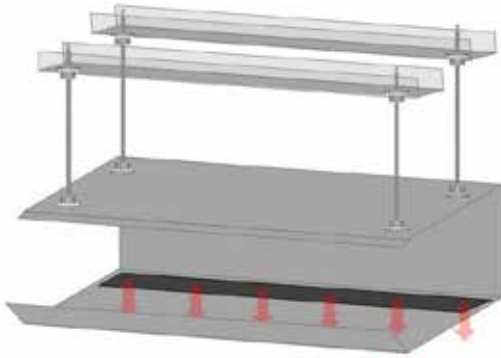


**Figure 14 Suspending from drop rods**

5. Level the unit and tighten the fixing points. Carryout a final check to ensure the unit remains level
6. Holes are provided in the casing for cable entry. Choose the appropriate hole to suit the installation. Note the terminal connection block is located to the right of the unit.
7. Install the cable into the case using a suitable cable gland for size of cable
8. Two RJ45 ports are located in the case to connect the program panel and any other air curtains to be controlled
9. Adjust outlet to required angle to give desired performance and tighten outlet grille.
10. Fit the Program panel and commission the unit

## Wall mounting bracket




**Figure 15 Wall mounting bracket**

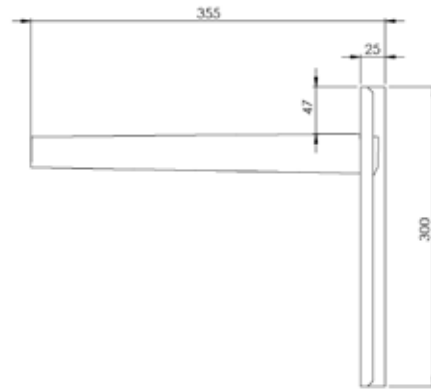


**Figure 15.1 Side view**

Figure 15.1 shows the overall dimensions of the wall bracket assembly.

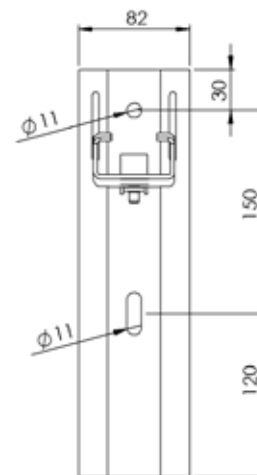

**Figure 15.2 Front view**


Figure 15.2 shows the dimensions of the bracket that is to be fixed to the wall, along with fixing positions. Please ensure that adequate fixings and wall structure are present to support the unit weight.

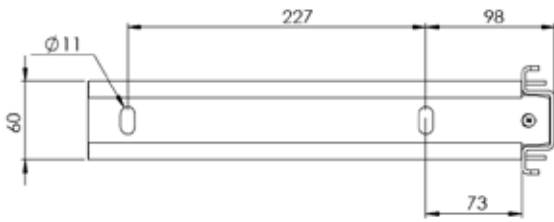


**Figure 15.3 Mounting bracket top view**

Figure 15.3 shows the dimensions of the bracket section that is to be fixed to the unit using 4 x M10 x 30mm 8.8 set screws, 4 x shake prove washers and 4 x flat washers. Use the four fixing points supplied in the casing

1. Using the details supplied with the bracket position the bracket against the wall at the desired mounting height and mark through the holes
2. Drill the wall then fix the brackets in position. Lift the chassis (using lifting gear if necessary) onto drop rods in the bracket
3. Ensure the unit is level and then tighten the fixing points with a final check to ensure the unit is level
4. Follow the instructions 6 to 10 of the drop rod mounting instructions grill.

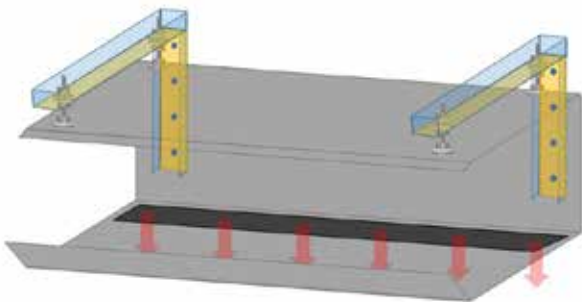

**Figure 16 Mounting bracket option**

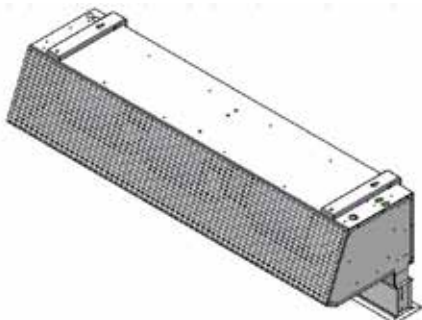

**Figure 16.1 Mounting bracket fitted to GB**

## Program panel

The program panel can be installed using the standard double surface box supplied with the program panel or recessed using a suitable flush mounted double conduit box. see "Figure 5.2 Surface mounting back box dimensions" on page 10 for details



**Figure 18 Program panel**

The program panel can be connected up to a maximum of 16 air curtains in one network.

For mains wiring refer to the wiring diagram on page 17

The program panel is connected to the base unit in the air curtain via pre-wired RJ45 cable/plugs. These cables are available in 2, 10, 20, 30, 50 and 100m lengths. It is recommended that this control cable is run separately within its own trunking to avoid external interference.



**Maximum cable run in any network must not exceed 100m in total including program panel cable.**

**Note:** All air curtains connected within the network system will operate under the settings of the single program panel. Any air curtain within the network can be connected with and respond to the following optional circuits:

- External switch (ie BMS enable) where required, to be volt free and wired in PARALLEL via normally open contacts to each terminal pair 'TIMER'. (Contacts closed to enable). Only air curtain(s) wired this way will respond to the enable signal.
- Door switches where required, to be volt free and wired to INDIVIDUAL base units via normally closed contacts to each terminal pair 'DOOR'. (Contacts open to enable door mode). Only air curtain(s) wired this way will respond to the door mode.
- An external sensor, where required, can be wired to INDIVIDUAL base units to each terminal pair 'EXT'. Only air curtain(s) wired this way will respond to the sensor setting.

### Optional wiring

At the Installers terminal block, remove the required jumper(s) and then wire in any external connections that are required.

External switch (i.e. BMS enable) to be volt free and wired via normally open contacts to terminal pair 'TIMER'. (Contacts closed to enable). Remove factory fitted jumper J1.

- Door switch to be volt free and wired via normally closed contacts to terminal pair 'DOOR'. (Contacts open to enable door mode). Remove factory fitted jumper J2.
- An external sensor, where required, to be wired to INDIVIDUAL base units to each terminal pair 'EXT'. Only air curtain(s) wired this way will respond to the sensor setting.
- If the optional external temperature sensor is connected to the air curtain. If the external temperature is equal to the set temperature, all air curtains are turned off. The temperature must then drop to 3°C below the set temperature before the air curtains are turned back on.
- Protection. There are two high speed fuses on the electric model base unit to protect the switching thyristors for the heater. An external circuit breaker with

the appropriate rating should be installed for the protection of the installation. See technical data for the correct MCB

### Networking

The program panel is connected to the first air curtain via pre-wired RJ45 cable to the socket in the first air curtain housing. See figure 25 on page 18

Connect a second RJ45 cable in to the spare RJ45 socket of the first air curtain, and then take across to one of the RJ45 sockets in the second air curtain.

Further RJ45 cables can be used to connect more air curtains to the network, up to a maximum of 16 air curtains can be linked to one program panel.

The RJ45 cable is 10m as standard however it is available in 2m, 20m, 30m, 50m and 100m lengths.




**Maximum length 100m. (Total length of cable used between program panel and last air curtain in network).**

It is recommended that this control cable is run separately within its own trunking if possible, to avoid external interference.

**Note: All air curtains connected within the network system can be controlled under the user settings of the single program panel.**

# Installer wiring - Electric heated models, single phase only

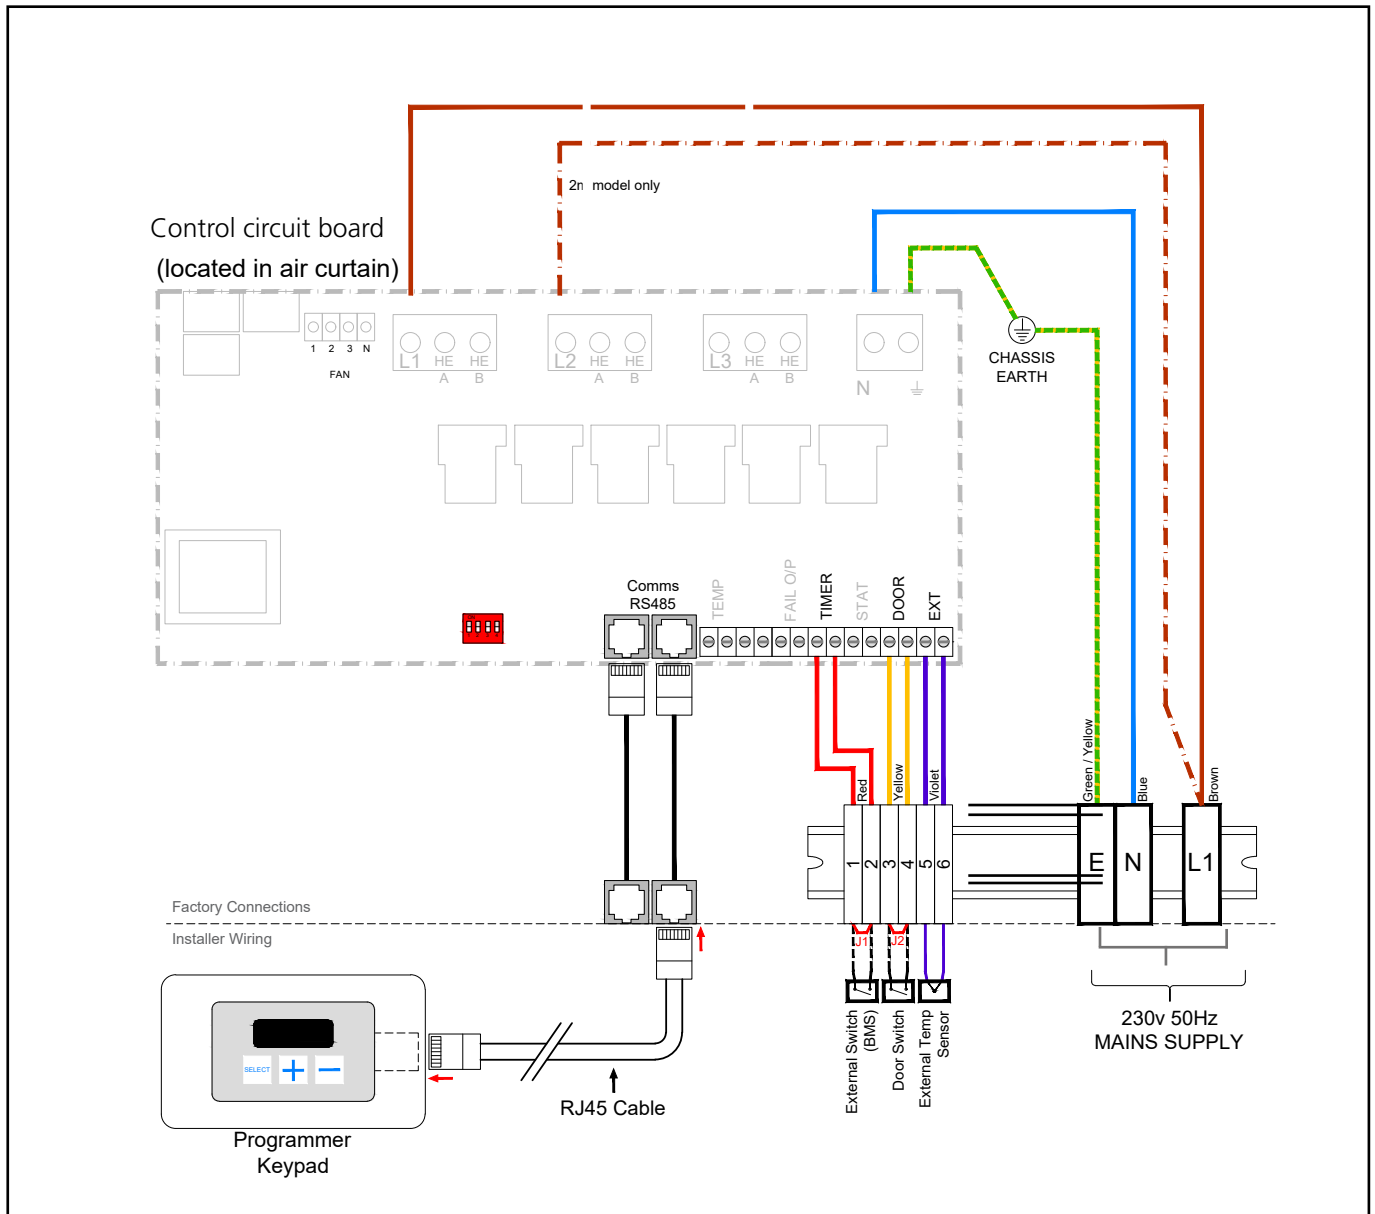

**Figure 21 Wiring diagram electric heated**

Terminal	Description	Cable
E	Mains earth	10mm <sup>2</sup>
N	Neutral	
L1	Phase 1	

**Table 7 Cable specification electric heated**

## Protection

There are two high speed fuses on the base unit to protect the switching thyristors for the heater. An external circuit breaker with the appropriate rating should be installed for the protection of the installation

Terminal	Description	Cable
Timer/BMS (J1)	Optional external switch	1.5mm <sup>2</sup>
Door (J2)	Optional door contact	
Ext	Optional external sensor	
Fail o/p	Fault output (0-5v)	
Fan	Optional 0-10v fan output	
Thermostat	Internal high limit thermostat	
PCB Fuses	Rating (A)	
F1	T1H (slow blow)	

**Table 7.1 Cable specification electric heated continued**

## Air curtain addressing

All air curtains work on an address to communicate with the program panel and are supplied with an default address of '0'.

Where multiple air curtains exist in a network they must be re-addressed using a unique address (0-9/A-F). This is achieved using the 4 way dip switch [2] mounted on the control panel base unit PCB

The program panel will check all addresses on first power up and this is displayed as the first digit on the display (in a network set up, all addressees will be viewed in rotation).

Note: If any address is altered after initial power up or an air curtain removed after initial installation, the program panel will also retain the original address although unable to respond. To remove an unwanted address follow the details in Power-up manual reset.

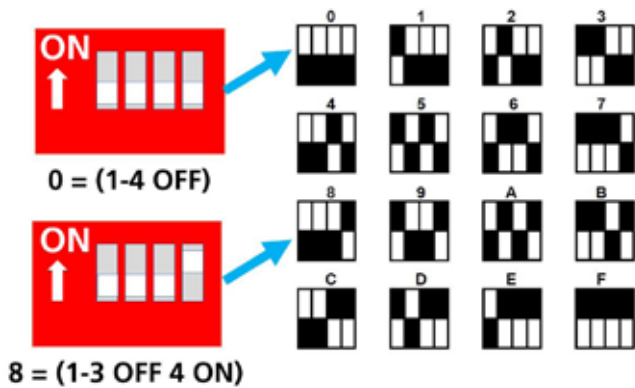


Figure 24 Air curtain address numbers.

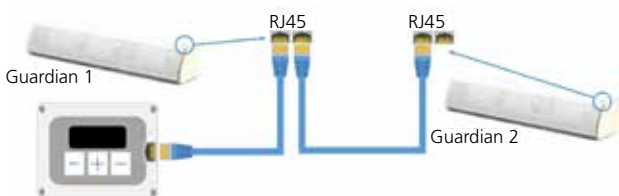


Figure 25 Wiring of 2 or more networked air curtains.

## Power-up manual reset

The system can be reset by powering-up the panel whilst holding down the **SELECT** and **-** buttons. The display shows the 'start' pattern but then goes blank.

Release the buttons where upon the display resumes and the system addressing commences, finding only those air curtains which are actually connected and working.

If **E ng** appears on the display, press and hold the **+** button for a few seconds then release. The display will then return to the normal mode.

## Standard and high capacity fan.

All units are supplied as standard capacity

All units have fans capable of providing standard & high capacity air duties (speeds Medium and High) which are controlled via the program panel supplied with every unit.

## Control Panel Operation

### Keypad buttons



The **SELECT** button will allow you to navigate.

The **+** button will allow you to increase the setting.

The **-** button will allow you to decrease the setting.

### Operation

On first power up, the display will show and have the following default settings:



- F. 0 (no fan)
- H. 0 (no heat)
- 16 (°C. Heat set point)
- 

If no Air Curtains are detected the display will show:



Note: Subsequent power ups will retain any entered settings in the display internal memory.

In normal operation the display will show for example:



'1' denotes the Air Curtain ADDRESS, and '27' the current outlet temperature. If the display is set to 'H1' (half heat) then the display unit will show:



The 'dot' after the Air Curtain number denotes heat setting 1. If the display is set to 'H2' (full heat) the display unit will show:



The 'dot' after the temperature number denotes heat setting 2. If an external temperature sensor is fitted then the display shows:



The small 'zero' shows a sensor detected and it's current temperature reading.

### Standard settings

Press the **SELECT** button. This will cause the display to brighten and display Air Curtain number and it's fan speed eg.



Press the **+** or **-** buttons to increase/decrease the desired setting between F0, 1, 2, or 3.

Pressing the **SELECT** button again will display the Air Curtain number and it's heat setting eg.



Press the **+** or **-** buttons to increase/decrease the desired setting between H0, 1, or 2.

Pressing the **SELECT** button again will loop back to start if only one Air Curtain is connected to the display unit. If there is more than one connected the display unit will then show the settings for the next Air Curtain in the network and so on.

### Engineers settings

To turn on the engineers settings press and hold the **+** button until the display goes blank then press **SELECT** the button. The display unit

will now display 'Eng' briefly.



This will disappear after a period of 10 minutes of inactivity on the keypad.

On pressing the **SELECT** button the display unit now works in the same way as standard for the fan and heat settings, but then an adjustable control temperature setting appears (if external sensor fitted).



*This control works by reading the temperature at the sensor and comparing it to the set point. The temperature is then controlled by automatically switching the controller outputs between H0, H1, and H2, thus maintaining reasonable heat control.*

Pressing the **SELECT** button again advances to the door link settings.

### Door link settings

Two settings are available for use when the door link circuit terminals are open circuit (PCB link removed). The first of these is displayed as:



'1' is the Air Curtain address and 'd2' denotes fan speed 2.

Press the **+** or **-** buttons to increase/decrease the desired setting between d0, 1, 2, or 3.

The second is displayed as:



'1' is the address for the Air Curtain and 't1' denotes heat setting 1. Press the **+** or **-** buttons to increase/decrease the desired setting between t0, 1 or 2.

Pressing the **SELECT** button again advances to the link group interlock settings.

### Link-group interlock

If more than one Air Curtain is connected to the display then there are two sets of interlocks available to enable a single Air Curtain in a group to be the 'master' controller based on links used.



'1' is the Air Curtain address and 'C0' is the default setting (no interlock set). Press the **+** or **-** buttons to



increase/decrease the desired setting between C0, or 1-7 (see Table 26). If the Air Curtain is set to eg.



This denotes that Air Curtain '1' is set to be the master for door and BMS interlocks. If interrogated all other Air Curtains will then display eg.



**C** This denotes a unit that is not the master.

"C" interlocks setting	Effect
1	Timer/BMS interlock
2	Door interlock
4	Thermostat interlock
"L interlocks setting	Effect
1	Not used
2	Not used
4	Block filter interlock

To set more than one interlock, add the appropriate numbers together, eg. 'C3' above works on timer and door interlocks.



If a controller is not the master, all three interlock links must be in place.

### All controllers

This setting can be accessed from the engineers settings whilst the external temperature indication is showing. This is displayed as:



This allows a single group of settings to be copied to all controllers in a network. Individual settings can still be used at a later date if required.

### Quick Options

#### Immediate turn off:

Press and hold the - button for two seconds, the display will go blank then the Air Curtain(s) will turn off.

#### Re-scan/engineers mode:

Press and hold the - button for two seconds, the display will go blank, then press **SELECT**. The display will show the controller type in the first digit and the number of Air Curtains in the fourth digit. Release both buttons and then press any button to continue, the panel is now in Engineers mode.

#### Turn on engineers mode:

Press and hold the + button for two seconds, the display will go blank, then press **SELECT** the display will show 'Eng', release both buttons.

#### Turn off engineers mode:

Press and hold the + button for two seconds, the display will go blank, then release.

## Maintenance and servicing



**Always ensure that the main external electricity supply is switched off and lock the switch (if fitted) before commencing any maintenance on this heater**



**To obtain the best results from the heater, it is essential to avoid the accumulation of dust and dirt within the unit on the air inlet and discharge grilles. For this reason, regular cleaning is necessary, paying particular attention to the removal of dirt build up on the fan assembly.**

Cleaning of the fan is best carried out with a soft brush and vacuum cleaner

The product should be serviced annually, by a competent person.

- 1. GS units.** Loosen the two screws securing the inlet cover and slide towards the end cover, now loosen the two screws in the next panel and slide towards the first panel which will then allow this panel to be released and lifted out of the dog bone slot This panel can then be lifted out of the tabs at the bottom to fully release. see figure 9 on page 13
- 2. GR units** loosen the screws securing the inlet grille and hinge down, the grille can be removed by releasing the spring loaded bolt to either side. See figure 12 and 13 on page 13




**Figure 26 GR Inlet cover**

3. With a soft brush clean away any dust from the motor and elements.

4. Check the security of all the components
5. Check for any signs of deterioration and replace components as necessary
6. Inspect the wiring for damage, chaffing of the outer case, damage cut or crushed and security in the terminals
7. Check that the fuses are rated correctly.
8. Clean the honeycomb outlet


MS

### Inlet foam filter replacement GS

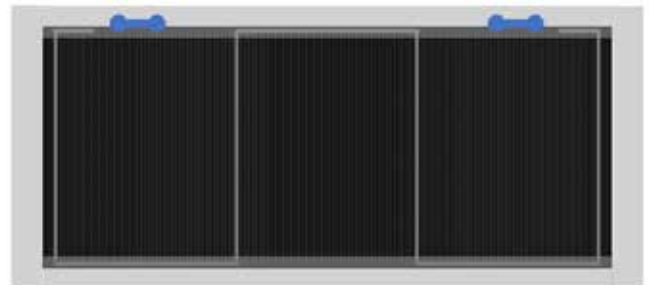


**Figure 27 GS inlet foam retaining clip 1**

1. Remove and replace the foam inlet filter, by unhooking the leg of the clip and passing it through the dog bone hole in the frame, then release the remaining parts of the clip to allow the foam filter to be removed and replaced. Carefully refit the clip and ensure the foam is not creased and secure.

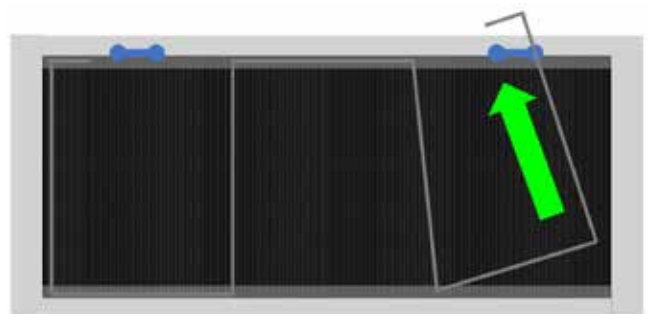

**Figure 27.1 GS removing the inlet foam retaining clip**


## Inlet foam filter replacement GR

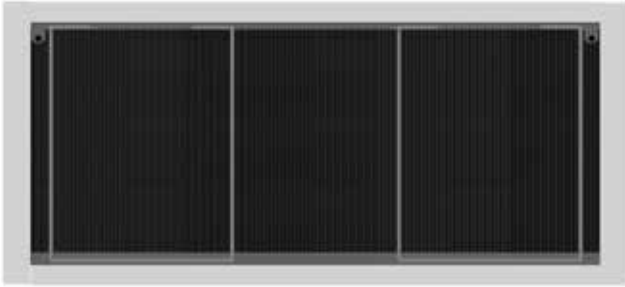

**Figure 28 GR inlet foam retaining clip 1**

MS

1. To remove the filter element of the GR units, select the clip from either end of the panel, push the outside leg of the retaining clip towards the centre of the filter/inlet grille which will release the clip out of the inlet grille frame, work along the clip releasing until the clip is fully out of the frame.
2. The filter element can now be removed and replaced with a new element reverse the procedure to refit and re-secure

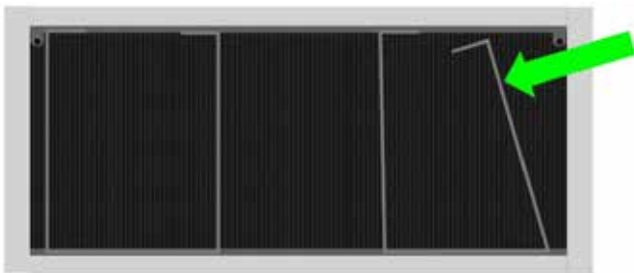


**Figure 28.1 GR removing the inlet foam retaining clip**

## Honeycomb outlet replacement


To remove the honeycomb outlet, first remove the complete carrier. The carrier is secured at one end by a bolt and stud to the other end. Remove the end panel to access this fixing bolt and then release the carrier from the stud side, on the 2m models the centre support can be moved to one side to allow the stud side to be released

On the GS units peel back the tabs which retain the honeycomb outlet, remove the honeycomb media from the carrier and replace. Then fit the new honeycomb media into the carrier and push the tabs back over the honeycomb to secure

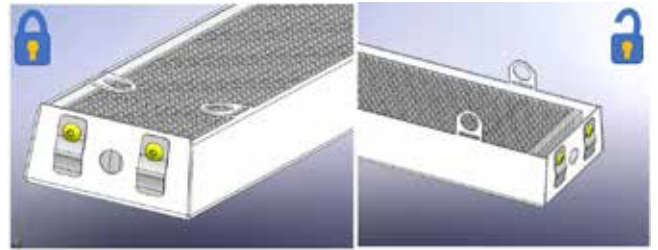


**Figure 29 GS honeycomb retaining**

On the GR units the tabs are part of a retaining plate, peel back the tabs which retain the honeycomb outlet remove the media from the carrier and replace. Then fit the new honeycomb media into the carrier and push the tabs back over the honeycomb to secure

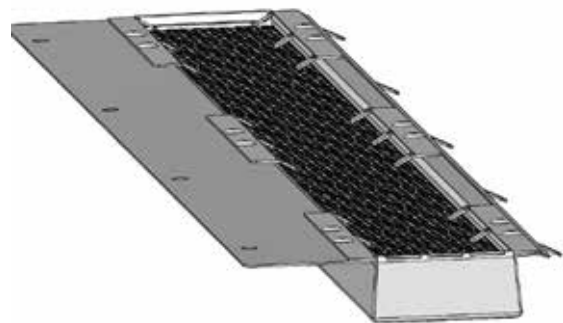

**Figure 29.1 GR honeycomb retaining**

Note the position of the temperature sensor from the right of the unit and ensure it does not get damaged, the cables will need to be disconnected from the control panel terminals TEMP, refit in the position given in figures 30 and table 9. (below)

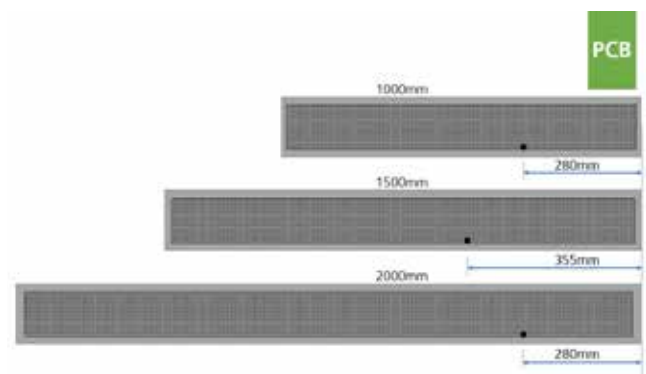

**Figure 30 Temperature sensor position**

Model length	Unit	Position from right
1 metre	mm	280
1.5 metre	mm	355
2 metre	mm	280

**Table 9 Temperature sensor position**

# Fault finding.

## General

All Air Curtains are fitted with fuse protection and motor thermal protection.

Other faults in relation to the element, motor and wiring should be identified using conventional fault-finding techniques. In the event that electrical components are replaced, please ensure that electrical safety checks in accordance with the regulations in force in the country of use are undertaken.

For the service engineer, please note that there is a thermal cut-out incorporated in the air curtain which needs to be manually reset. The cut-out is located near to the control panel, note 2m has two, with the second located near the centre of the fan deck.

Re-setting the thermal cut-out may help to identify the nature of the fault however we do not recommend re-setting without a thorough investigation into why the cut-out operated.



Figure 31 Thermal cut-out

## Program panel.

The circuit board within the will communicate any potential faults to the program panel. Fault codes are displayed on the program panel as a code with a prefix "E" e.g. **0 E6**. The first number represents the air curtain address.

For fault codes refer to page 24

As the faults are mutually exclusive, the first error code displayed on the program panel will stay on until the fault has been cleared.

Apart from the communication failure fault **0 --** which could be due to a broken connection of the data link and the air curtain not found fault, **E rr** which could be due to incorrect addressing, all other faults will cause the base unit to switch off the heater output.

The air curtain circuit board is protected from any short circuit of the air sensor **0 E1** or heat sink sensor **0 E4** as the error will cause the temperature to rise and trigger over temperature fault. **0 E1**

There are five basic checks to perform should 'X--' **0 --** appear on the program panel display. These are as follows:

- Continuity: Use a multimeter to check continuity between each end of the cable cores.
- Short circuit: Use a multimeter to check that there are no short circuits between any of the cable cores.
- Plugs: Check that the plugs are firmly seated in the circuit board sockets in both the program panel and on the circuit board
- Addressing: (Network versions only). If two or more air curtains are networked, check that each base unit has a unique address as described in air curtain addressing on page 18.
- Network cables: Ensure that the total run of all cables in the network does not exceed 100m including the cable to the program panel.



If a program panel has never before been run, it automatically starts in engineer's mode when first powered-up. To exit this mode, press and hold the **+** Button.

Alternatively, the engineer's mode automatically self-clears after approximately 10 minutes of non-activity on the switches. The system can be reset by powering-up the panel whilst holding down both the **SELECT** and **-** buttons.

The display shows the 'start' pattern but then goes blank.

Release the buttons where upon the display resumes and the system addressing commences, finding only those air curtains which are actually connected and working.

If **E n9** appears on the display, press and hold the **+** button for a few seconds then release. The display will then return to the normal mode.

## FF Fault codes

# = Air curtain address#\_ \_ , #E1, #E2, #E5 and #E6 codes also apply to standard controller.

Code	Description	Symptom	Possible cause	Remedy
# _ _	Communications failure	No control on unit	Bad data cable connection Damaged cable	Check data cables and plugs Replace damaged cable
# E1	Air sensor failed	Fan operating, no heat	Air sensor cable disconnected Air sensor broken	Check cable Replace air sensor
# E2	Air sensor temp too high	Fan operating, no heat	High ambient air temperature Incorrect motor or fan deck rotation Motor failure	Check ventilation Check rotation of the fan deck Check motor, replace if necessary
# E3	Heatsink too hot	Fan operating, no heat	High ambient air temp/faulty circuit board	Replace air curtain circuit board
# E4	Heatsink sensor failure	Fan operating, no heat	Heatsink sensor wiring disconnected/ faulty Heatsink sensor faulty	Check wiring Replace air curtain circuit board
# E5	Ext. temp sensor failure	Unit runs but no external temperature control	External temperature sensor faulty	Repair faulty wiring Replace faulty sensor
# E6	Overheat stat open circuit	Fan operating, no heat	Overheat stat open circuit	Replace overheat thermostat

**Table 10 Fault codes**

## Spare parts.

Note Any spare part components that are not approved by the manufacturer could invalidate the approval of the appliance and validity of the warranty.

### General

Right hand & left hand is when viewed from inside of the building, looking at the unit into the door opening.



Figure 32 Handing of the unit

Component	1000	1500	2000
Generic components			
Fan deck assembly	1026174	1026175	1026174 x 2
Program panel	108221-RJ45-1		
Resistor	n/a	1037491	n/a
Honeycomb core	1026068	1026078	1026068 x 2
Inlet cover assembly GS	1026849		
Inlet cover assembly GR	1026662	1026163	1026829
Inlet cover filter only GS	1026664		
Filter securing clip GS	1026910		
Inlet cover filter only GR	1026665	1026835	1026665 x 2
Filter securing clip GR	1026962		
End cap GS left hand	1026505		
End cap GS right hand	1026506		
Control fuse T1H (1A 5mm x 20mm)	06-00157-1AT		
Control panel (base unit)	STDELECBU45		

SP

Table 11 Spare parts

## Parts replacement.



**Warning**  
Ensure electrical power is isolated from the product.

For access follow steps as stated in Installation Section on page 13

1. GS units, remove all of the front covers, remove the cover plate to access the control panel, installers terminal block,

transformer and fan deck (motor and fans).

2. GR units, completely remove the inlet panel

### Control panel



**Make a note of the wiring at the control panel. Make a note of the dip switch settings**

## Make a note of the installer terminal block wiring

1. Disconnect the wires from the control panel terminals including the earth connections which are bolted to the chassis.
2. Disconnect the installer terminal block assembly by removing the two screws securing the block bracket to the control panel mounting plate
3. Remove the control panel, this is secured by two screws in the control panel mounting bracket situated to the top of the bracket furthest away from the honey comb outlet grille.
- SP** 4. With the control panel out of the unit disconnect the blue wire from the temperature sensor.
5. Replace the control board and reverse the steps remembering to reconnect the temperature sensor wire which goes through the hole in the PCB

Reverse the steps to install the new control panel

Set the dip switch for the location and follow the networking address settings. For more information refer to the section on page 18.

## Heating element

1. Follow steps to remove the covers
2. Remove the fixing bolts holding the honey comb outlet grill assembly and remove this.
3. Make a note of the wiring at the control panel for the heating element and the temperature sensor
4. Disconnect the wires at the heating element to the control panel
5. Remove the fixing bolts in the fan deck mounting plate which secures the heating element.

6. Remove the heating element
7. Make a note of the wiring to the heating element including all the jumper positions
8. Remove the wires and fit to the new element pass them through ready for connection to the control panel
9. Refit the heating element and reverse the steps to install the new heating element
10. Ensure the temperature sensor is refitted in the correct position and wired into the TEMP terminal of the control panel.

## Fan deck

1. Follow the steps to remove the covers and the control panel, complete with its mounting bracket as one of the fan deck securing nuts are under the control panel bracket.
2. With the control panel and bracket out of the unit disconnect the wire from the motor
3. Remove the wires to the thermal cut out sensor, (two sensors on the 2 metre units) and remove the thermal cut out.
4. Remove the four securing nuts, shake proof washer and flat washer that secure the fan deck.
5. Lift out the fan deck
6. Replace the deck and reverse the steps to install the new fan deck





**NORTEK GLOBAL HVAC (UK) LTD**

Fens Pool Avenue  
Brierley Hill  
West Midlands DY5 1QA  
United Kingdom  
Tel +44 (0)1384 489250  
Fax +44 (0)1384 489707  
reznorsales@nortek.com  
www.reznor.eu

Nortek Global HVAC is a registered trademark of the Nortek Global HVAC limited. Because of the continuous product innovation, Nortek Global HVAC reserves the right to change product specification without due notice.