

# Installation Details (Cont)...

Before fitting a horizontal flue, it will be necessary to rotate the I/D fan through 90° on it's mounting bracket to enable the flue to be routed to the rear of the air curtain as shown in figure 9.

Removal and refitting of the I/D fan is described on page 19 of this manual, parts replacement.

Note 1: The maximum permissible horizontal flue length should be calculated using the formula for equivalent flue sizes shown on the previous page.

Note 2: When the horizontal flue is to pass through a wall constructed of combustible material, a suitable approved fireproof sleeve should be fitted prior to installing the flue pipe.

# Wiring Details

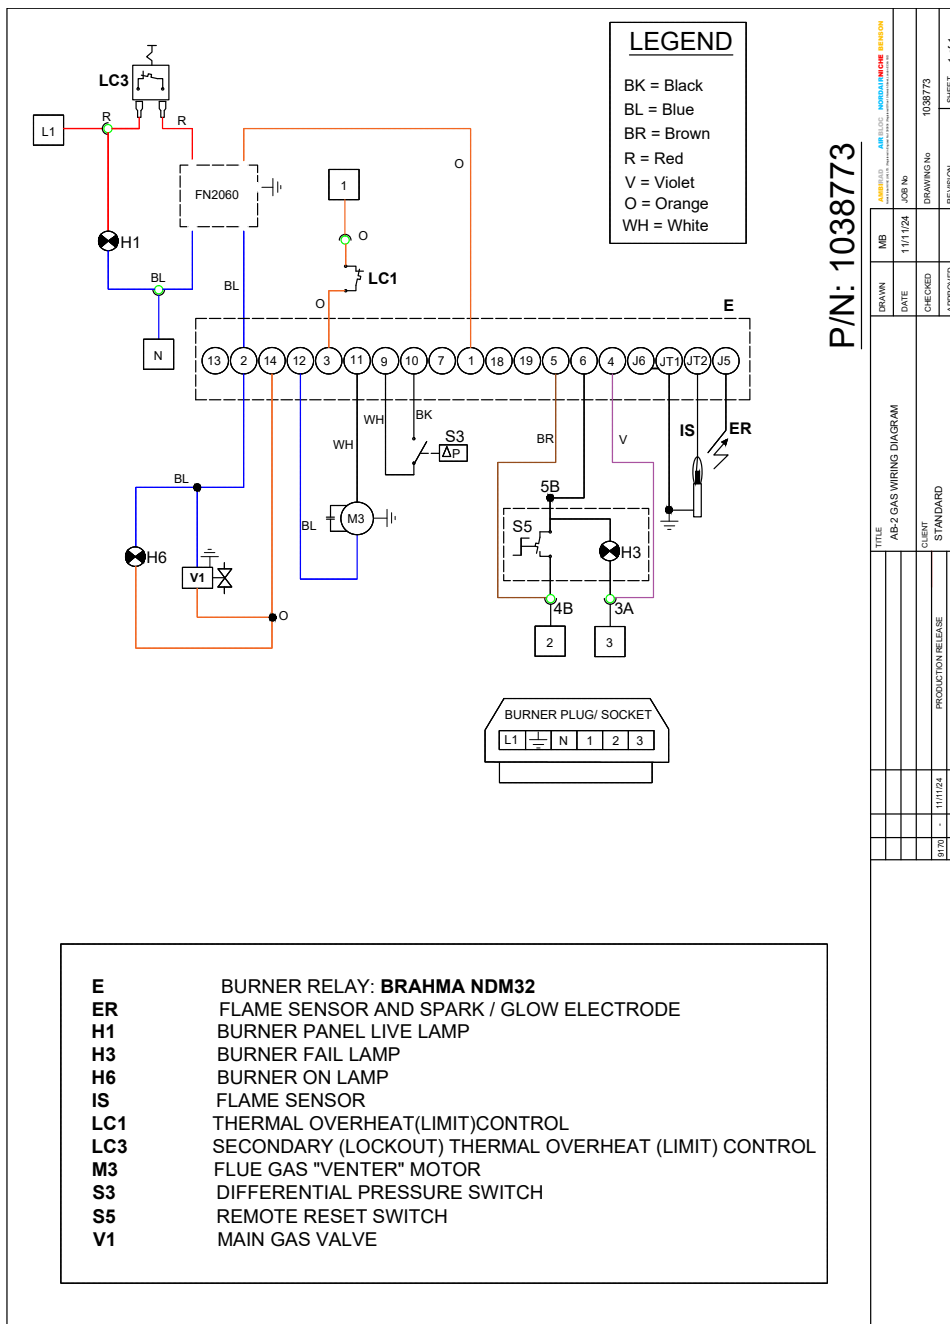


Figure 10.